



AMS EVO X Twin

Tip Exhaust

System

The goal of AMS is to provide the highest quality, best performing products available. By utilizing research and development, and rigorous testing programs AMS will never compromise the quality or performance of our products. In addition, AMS will only provide the finest customer service offering only parts and advice that are in the best interests of the customer. AMS was built on a foundation of integrity. This is who we are; this is what you can count on.

A vehicle modified by the use of performance parts may not meet the legal requirements for use on public roads. Federal and state laws prohibit the removal, modification, or rendering inoperative of any part or element of design affecting emissions or safety on motor vehicles used for transporting persons or property on public streets or highways. Use or installation of performance parts may adversely affect the drivability and reliability of your vehicle, and may also affect or eliminate your insurance coverage, factory warranty, and/or new OEM part warranty. Performance parts are sold as-is without any warranty of any type. There is no warranty stated or implied due to the stresses placed on your vehicle by performance parts and our inability to monitor their use, tuning, or modification.

These instructions are provided as a guide only as there are many variables that cannot be accounted for concerning your particular vehicle, including but not limited to model year differences, model differences, the presence of non-OEM parts, and modifications that may already be or were previously installed. A basic knowledge of automotive parts and systems is helpful but a better understanding of the parts and systems on your particular vehicle may be required.

If you have any questions or issues at any time during the installation of your AMS product(s) please call us for technical assistance. The AMS tech line can be reached M-F, 9AM-PM Central time at 847-709-0530 for AMS products only.

Packing List:

- 3" Mid-pipe A (Front)
- 3" Mid-pipe B (Rear)
- 3" Rear muffler section
- 3" Passenger side tip
- 2 V-band clamps
- 4 Disk inserts
- Hardware and gaskets

Installation Tips:

- Have someone help during the install, if no one is available have some bungee cords handy to help hold the exhaust in place during the install.
- Using a little grease or similar lubricant will make installing the rubber hangers easier.

Installation Instruction:

- 1) Start off by removing the factory exhaust system.
- 2) Lay out the AMS exhaust system and familiarize yourself with the different connections and fitment. All methods of install will be different depending on conditions.
- 3) Install the 3 hole rubber hangers onto the AMS exhaust system, be sure to install as shown below, they are oriented differently than stock. The 2 hole hanger can go on either way.





- 4) Loosely connect Mid-pipe A and Mid-pipe B together and install onto the car.






- 5) Install the muffler section with the rubber hanger and v-band clamp. Leave the v-band clamp loose at the moment.



- 6) Once all three pieces are on the car you can tighten up both of the 2 bolt flanges.

- 7) At this point you can now install the passenger side tip assembly and the disk insert of your choice. If you do not want any restriction be sure to use the ring that is included, this ring will seal the connection. The disks will fit very snug, you may have to lightly tap them into place before installing the tip.

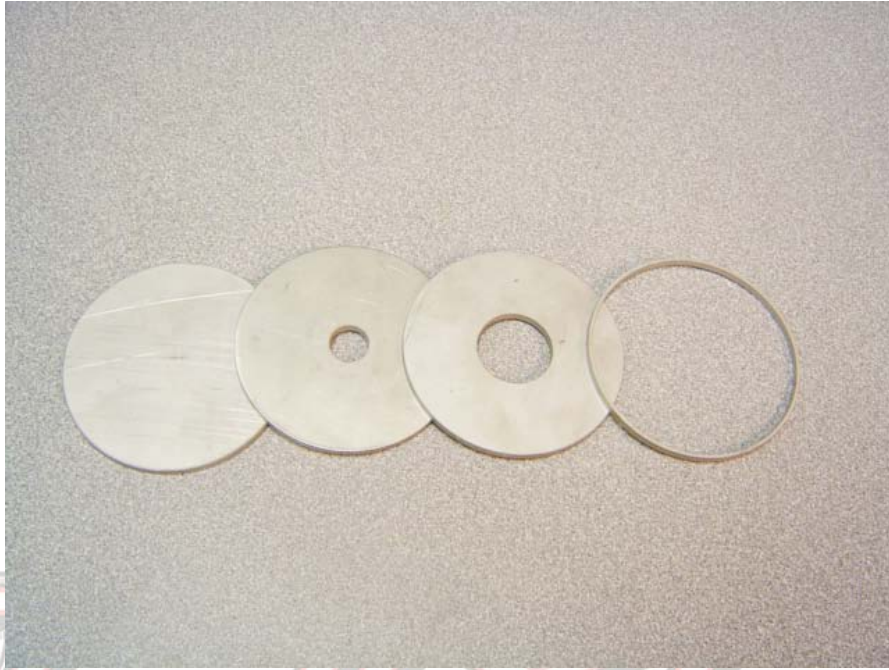

- 8) Once the passenger side tip assembly and disk is installed you can now rotate both of the rear v-band connections until the exhaust is at the angle and height of your liking.